


TSPN1

TRANSISTOR SWITCH POSITIVE TO NEGATIVE

FOR SITUATIONS WHERE A POSITIVE OUTPUT ON A VEHICLE IS REQUIRED TO BE CHANGED TO NEGATIVE IE:- POSITIVE DOME LIGHT ON VEHICLE TO BE CONNECTED TO A NEGATIVE TRIGGER INPUT ON ALARM/IMMOBILISER/UPGRADE

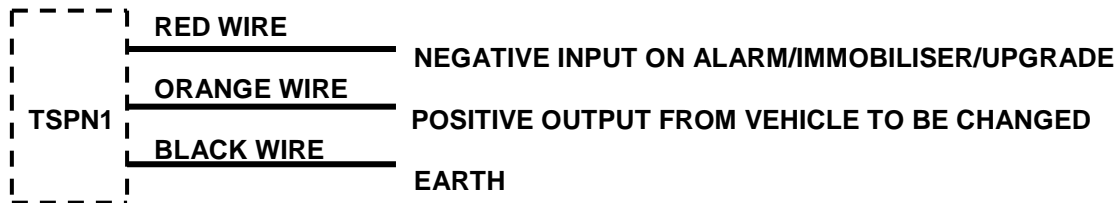


WARNING:- THIS DEVICE HAS A MAXIMUM CURRENT CAPABILITY OF **100ma.**

TSNP2

TRANSISTOR SWITCH NEGATIVE TO POSITIVE

FOR SITUATIONS WHERE A NEGATIVE OUTPUT ON A VEHICLE IS REQUIRED TO BE CHANGED TO POSITIVE IE :- NEGATIVE BLINKER OUTPUT ON VEHICLE TO BE CONNECTED TO A POSITIVE TRIGGER INPUT ON ALARM/IMMOBILISER/UPGRADE

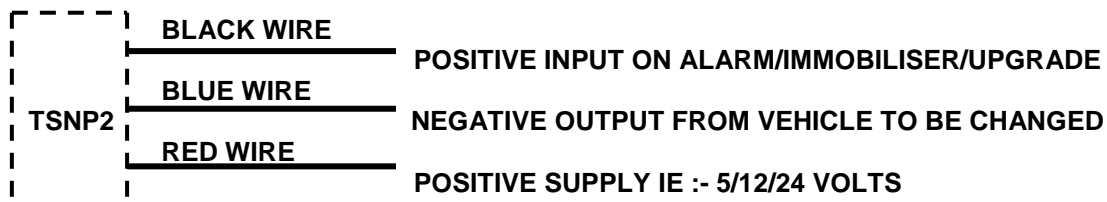

WARNING:- THIS DEVICE HAS A MAXIMUM CURRENT CAPABILITY OF **100ma.**